

APPENDIX L

How to reload the Equinox Software Package

Click on the picture of the console on the bar at the bottom of the screen.

In the window that opened (dtterm) type:

```
mount -F cdfs -o fperm=0555,nmconv=c -r /dev/cdrom/c1b0t010 /mnt
```

Type:

```
pkgadd -d /mnt/DRIVERS/UNIX/UNIXWARE eqn
```

- This seems to be an ISA system. Is this correct [Y/n]? Y
- Should the driver configure all Equinox ISA boards [Y/n]? Y
- Enable high baud rate selection [y/N]? Y
- Should the default set of port monitors/services be installed [Y/n]? Y
- Enter the port service baud rate [9600]: <Enter>

Once the “installation successful” notification is displayed, type `umount /mnt` <Enter> then remove the Equinox CD from the CD-ROM drive.

Type `scoadmin` <Enter>.

Double click on the Hardware folder.

Double click on the Serial Manager selection.

Click on the “View” drop-down menu then click on “Boards”.

Click on the board labeled “eqn” in the list of port boards in the window.

Click on the “View” drop-down menu and click on “Ports”.

Highlight the first port (or whichever port requires configuration). When the “Modify Serial Port term/[port number]” window displays, set the parameters as desired.

Suggestion- Set all ports and set each as follows:

Port type – Terminal

Configure port – incoming and outgoing

- Speed (bps) – auto
- Advanced options Port settings... - Data bits: 8, Parity: None

Click on the “Host” drop-down menu and click on “Exit”.

On the “System Administration” window, click on the “File” drop-down menu and click on “Exit”.

Call CAO for further assistance DSN 687-1051, Comm: 804-734-1051.