


Stowing Load in M1114 Truck


4-19. Stow mission equipment in the truck cargo compartment as shown in Figure 4-24. Stow items in the cab area as shown in Figure 4-25. Install the wood side protection boards as shown in Figure 4-26.

CAUTION
Only ammunition listed in FM 10-500-53/MCRP 4-3.81/TO 137-18-41 may be airdropped. Package, label, and mark hazardous material according to AFJMAN 24-204/TM 38-250.

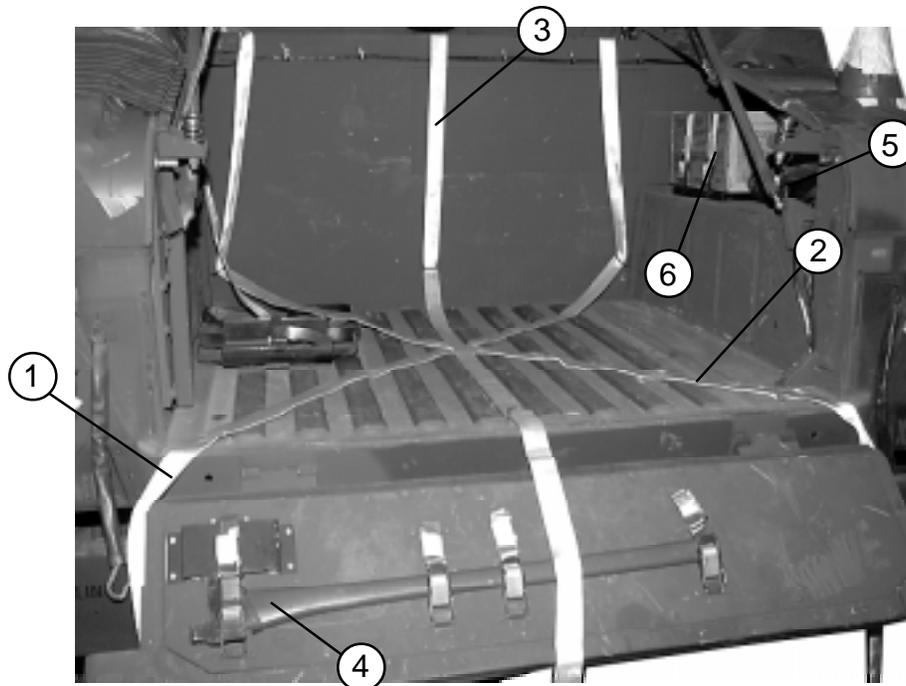


- ① Route a lashing through the left rear and right front cargo bed rings.
- ② Route a lashing through the right rear and left front cargo bed rings.
- ③ Route a lashing through the front center and rear center cargo bed rings.
- ④ Secure the axe in its mount on the tailgate with the straps provided.
- ⑤ Secure the jack and MAX tool kit in the right storage area over the wheel well with the straps provided.
- ⑥ Place one box of 9-mm ammunition in the right wheel well cargo area and secure it with the straps provided.

Figure 4-24. Accompanying Load Stowed in Cargo Bed

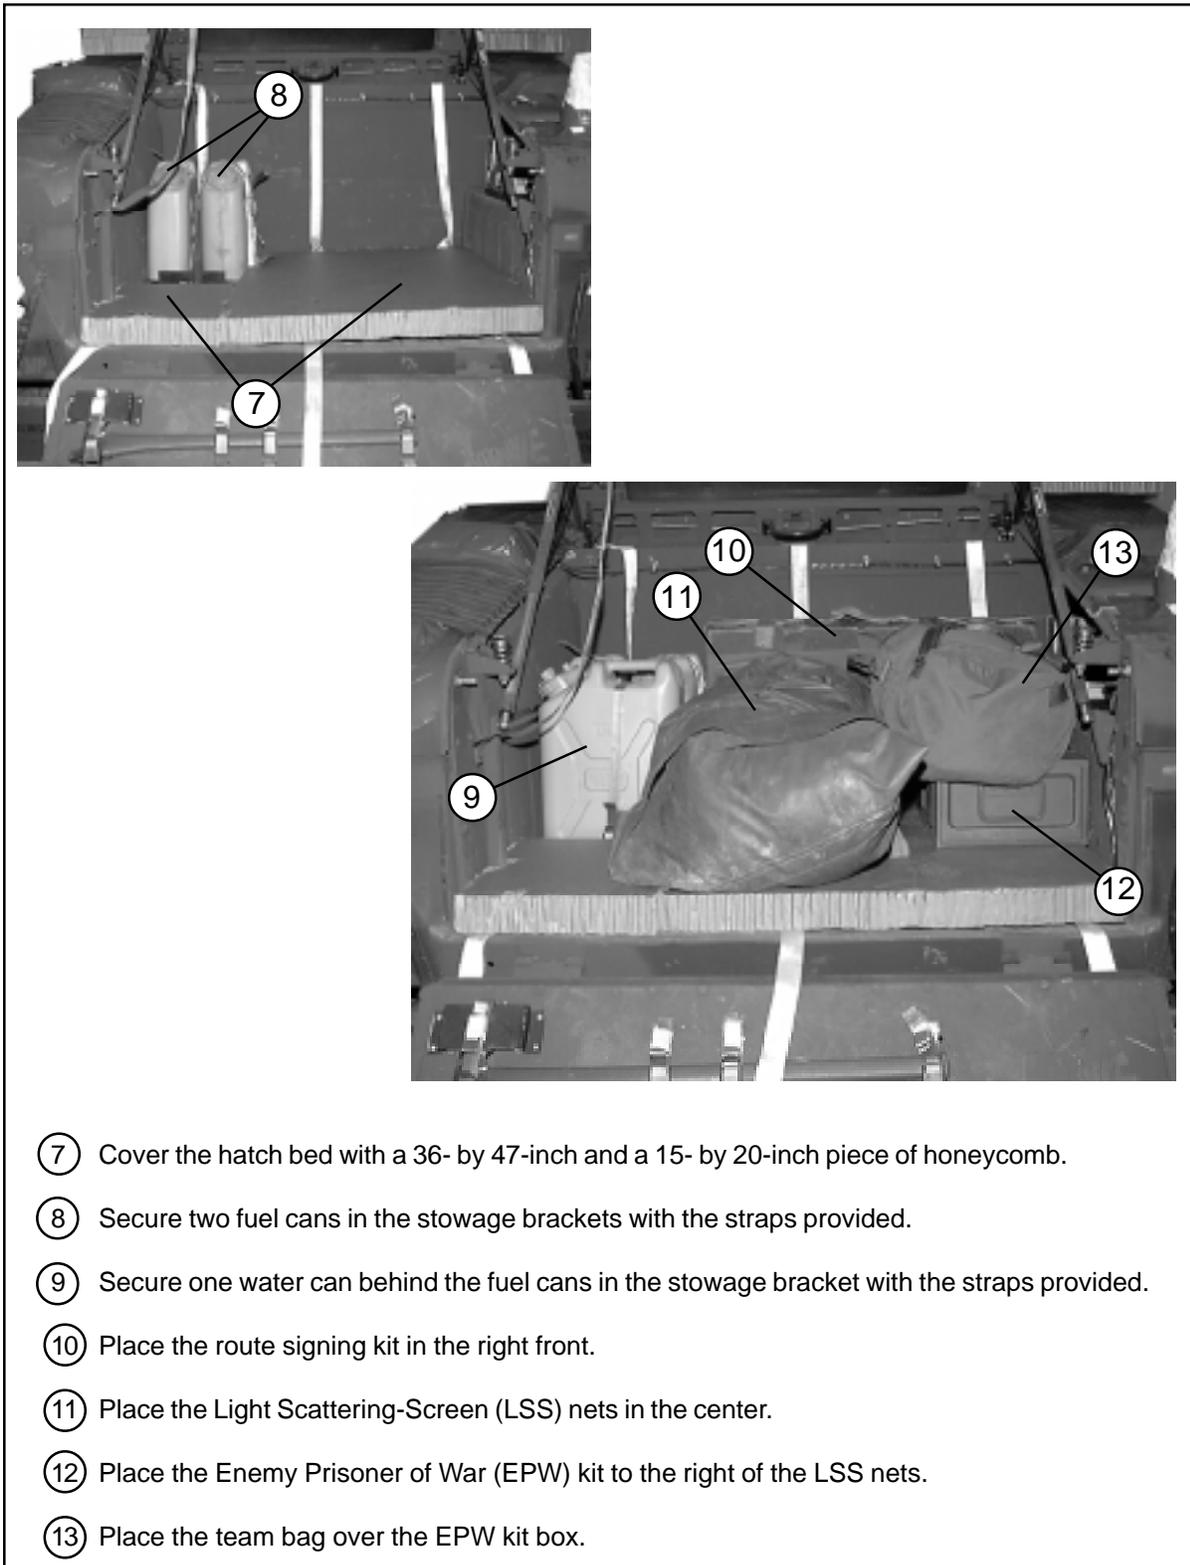


- ⑦ Cover the hatch bed with a 36- by 47-inch and a 15- by 20-inch piece of honeycomb.
- ⑧ Secure two fuel cans in the stowage brackets with the straps provided.
- ⑨ Secure one water can behind the fuel cans in the stowage bracket with the straps provided.
- ⑩ Place the route signing kit in the right front.
- ⑪ Place the Light Scattering-Screen (LSS) nets in the center.
- ⑫ Place the Enemy Prisoner of War (EPW) kit to the right of the LSS nets.
- ⑬ Place the team bag over the EPW kit box.

Figure 4-24. Accompanying Load Stowed in Cargo Bed (continued)

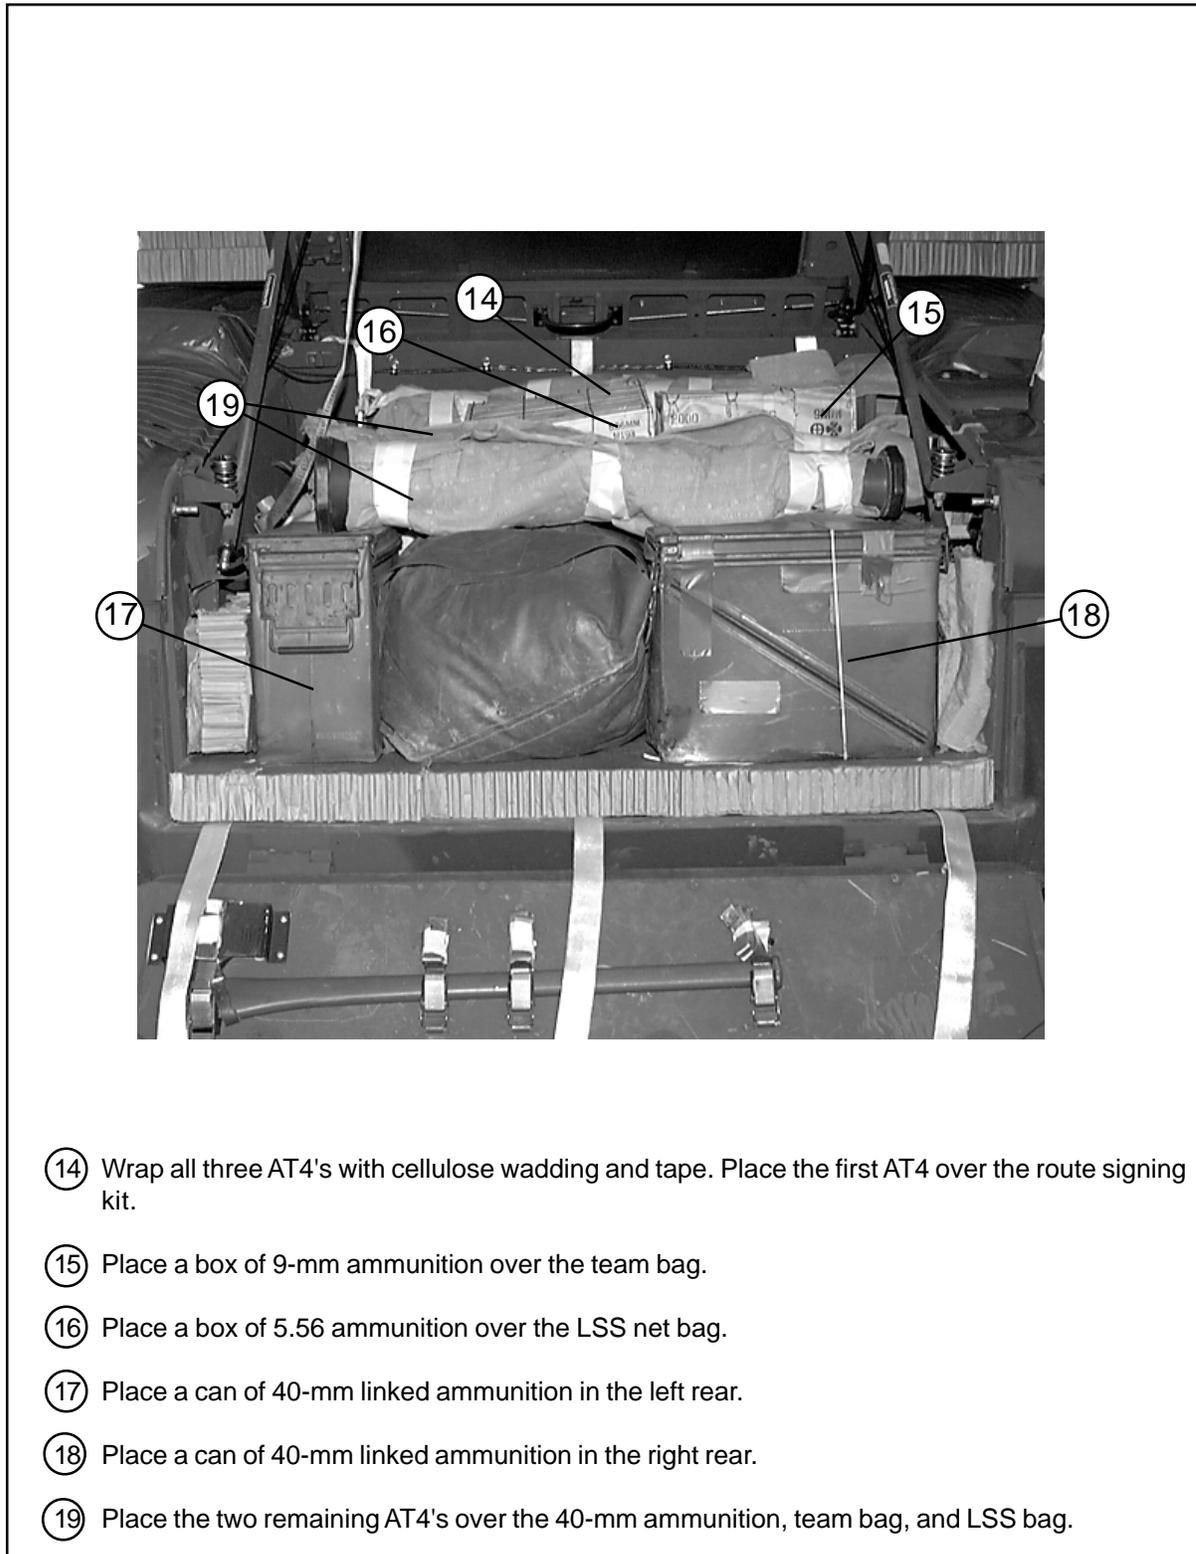

- ⑭ Wrap all three AT4's with cellulose wadding and tape. Place the first AT4 over the route signing kit.
- ⑮ Place a box of 9-mm ammunition over the team bag.
- ⑯ Place a box of 5.56 ammunition over the LSS net bag.
- ⑰ Place a can of 40-mm linked ammunition in the left rear.
- ⑱ Place a can of 40-mm linked ammunition in the right rear.
- ⑲ Place the two remaining AT4's over the 40-mm ammunition, team bag, and LSS bag.

Figure 4-24. Accompanying Load Stowed in Cargo Bed (continued)

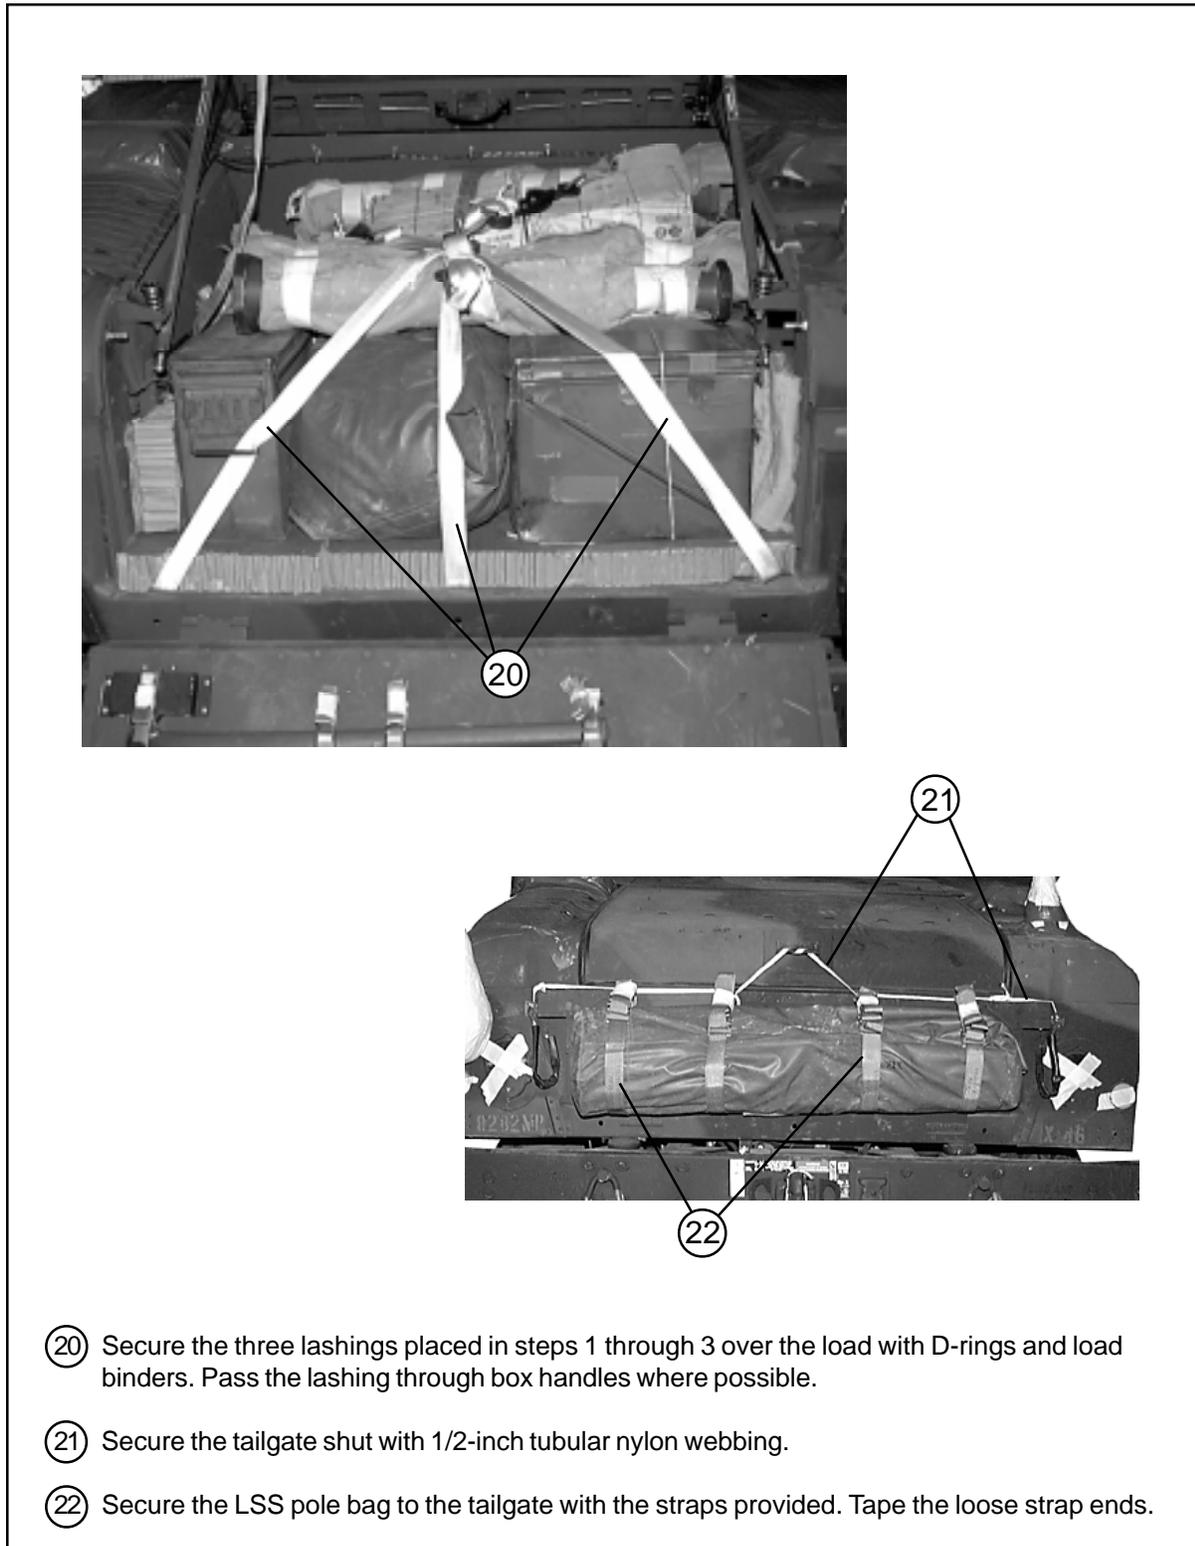

- ②0 Secure the three lashings placed in steps 1 through 3 over the load with D-rings and load binders. Pass the lashing through box handles where possible.
- ②1 Secure the tailgate shut with 1/2-inch tubular nylon webbing.
- ②2 Secure the LSS pole bag to the tailgate with the straps provided. Tape the loose strap ends.

Figure 4-24. Accompanying Load Stowed in Cargo Bed (continued)


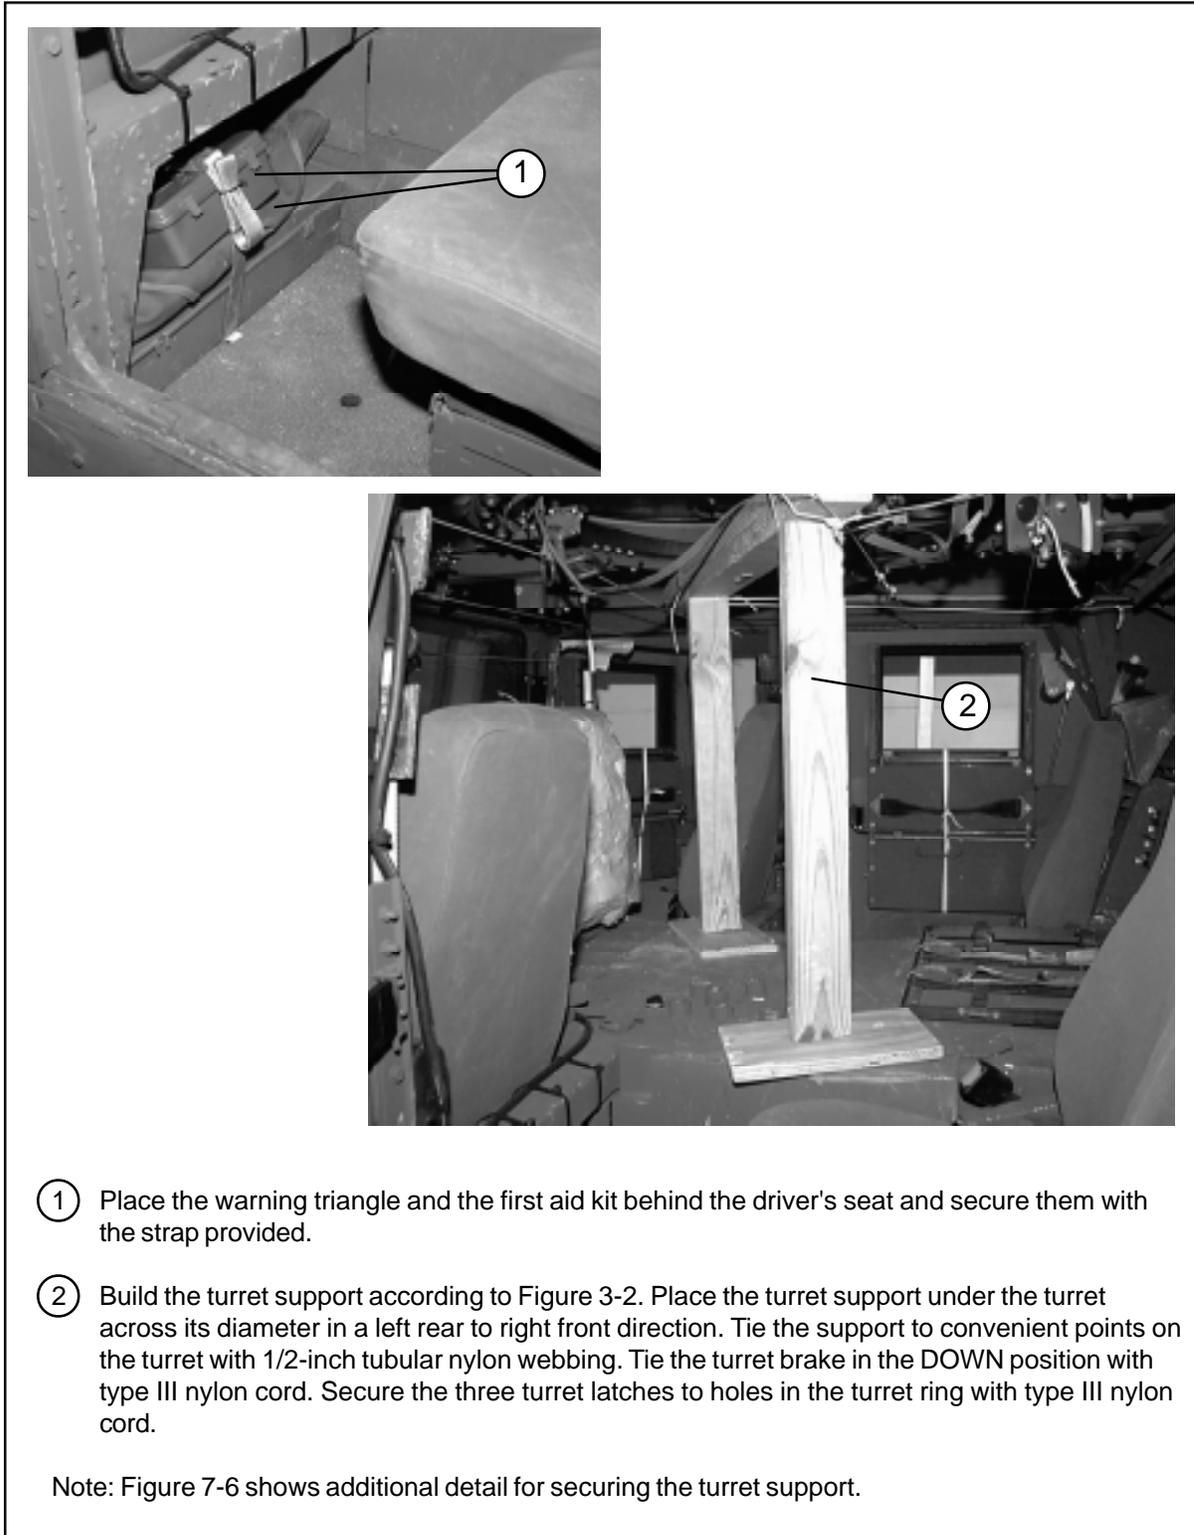


Figure 4-25. Accompanying Load Stowed in Cab



- ③ Place three boxes of 40-mm linked ammunition in the space provided between the seats. Place two boxes of 5.56-mm ammunition on the 40-mm boxes. Secure the ammunition with the straps provided. Safety the strap fasteners with type III nylon cord.
- ④ Place two 5.56-mm ammunition boxes in front of the ammunition placed in step 3.
- ⑤ Place a box of 40-mm linked ammunition on the right rear passenger seat.
- ⑥ Place the MOD60 kit to the left of the 5.56-mm ammunition boxes placed in step 4.

Figure 4-25. Accompanying Load Stowed in Cab (continued)

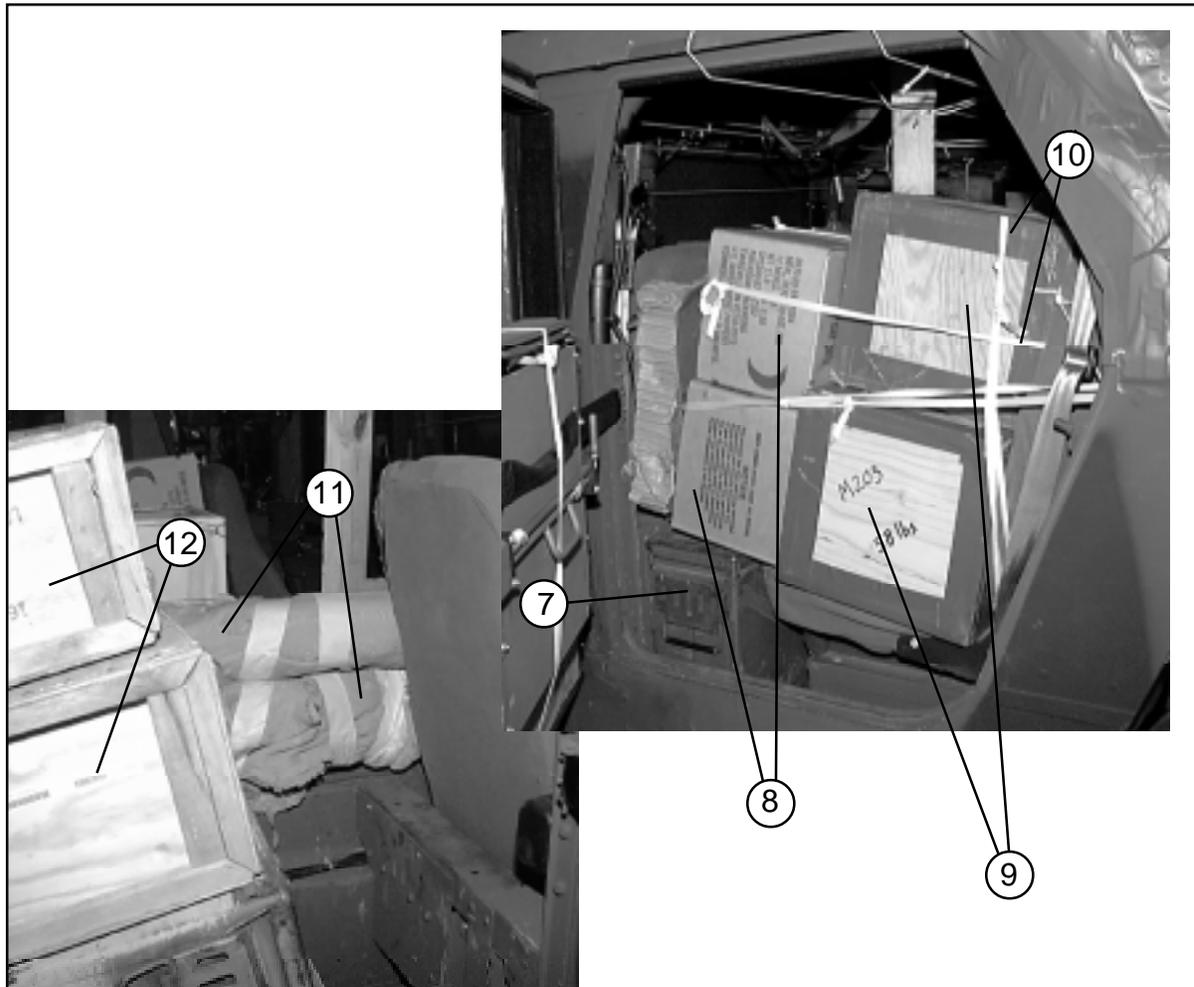

- ⑦ Place a box of 40-mm linked ammunition upright on the floor behind the driver's seat.
- ⑧ Set two boxes of MRE's on their sides over the 40-mm ammunition box.
- ⑨ Place a box of claymore mines and a box of M203 grenade rounds between the left rear seat back and the boxes placed in steps 7 and 8.
- ⑩ Tie the items placed in steps 7 through 9 to the seat back and to stationary points in the truck with 1/2-inch tubular nylon webbing. Place a piece of honeycomb between the driver's seat back and the tied items.
- ⑪ Wrap the Mark 19 grenade launcher, tripod, and fording stack with cellulose wadding and tape. Place them in the cab center between the passenger seats. Secure them to points near the floor with type III nylon cord.
- ⑫ Place two 5.56-mm ammunition boxes over the 40-mm ammunition box placed in step 5.

Figure 4-25. Accompanying Load Stowed in Cab (continued)


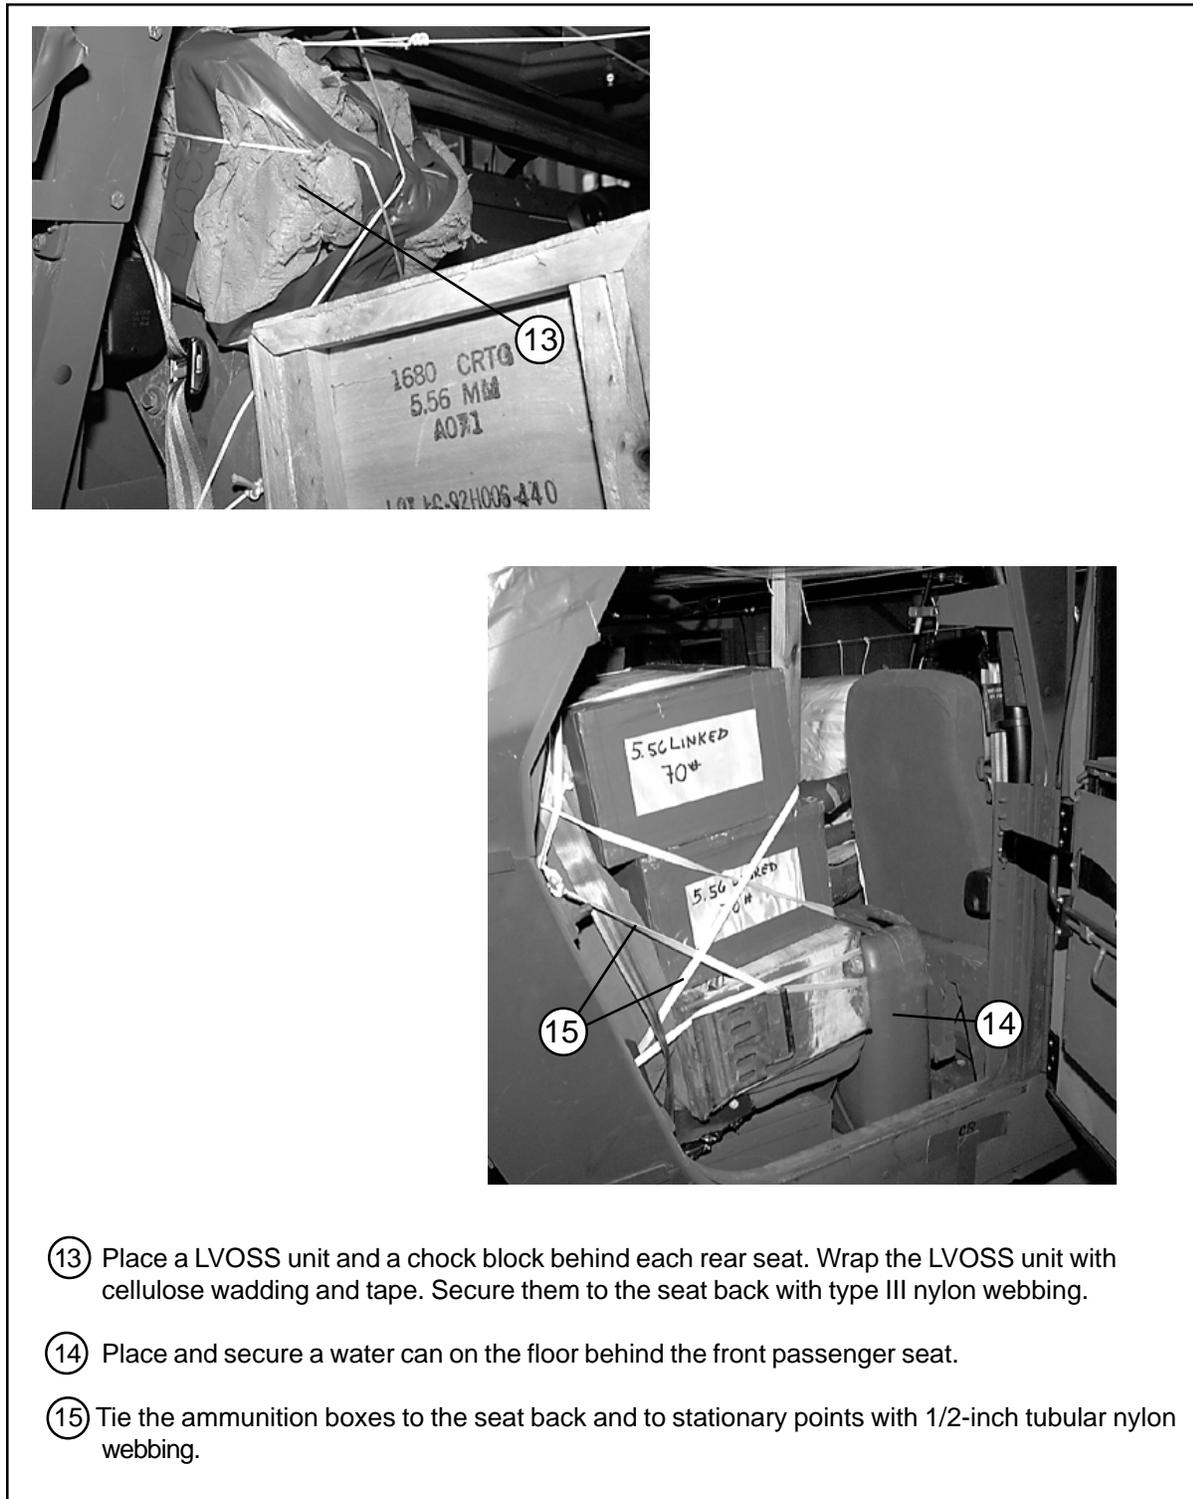


Figure 4-25. Accompanying Load Stowed in Cab (continued)

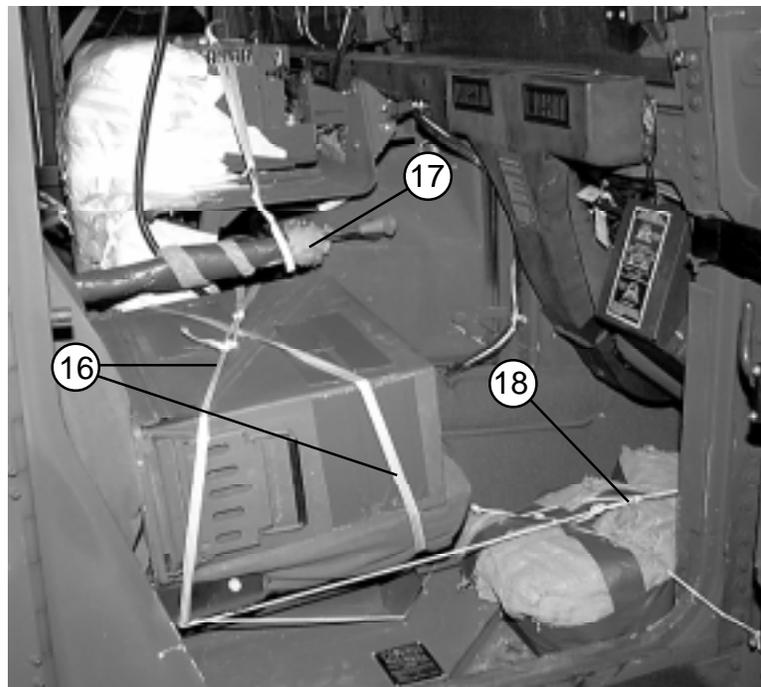

- ①⑥ Tie a box of 40-mm linked ammunition to the front passenger seat with 1/2-inch tubular nylon webbing.
- ①⑦ Wrap the antenna sections with cellulose wadding and tape. Tie the antenna sections to convenient points with 1/2-inch tubular nylon webbing.
- ①⑧ Pad the remaining LVOSS units with cellulose wadding and tape. Tie them in the front passenger footwell with 1/2-inch tubular nylon webbing.

Figure 4-25. Accompanying Load Stowed in Cab (continued)

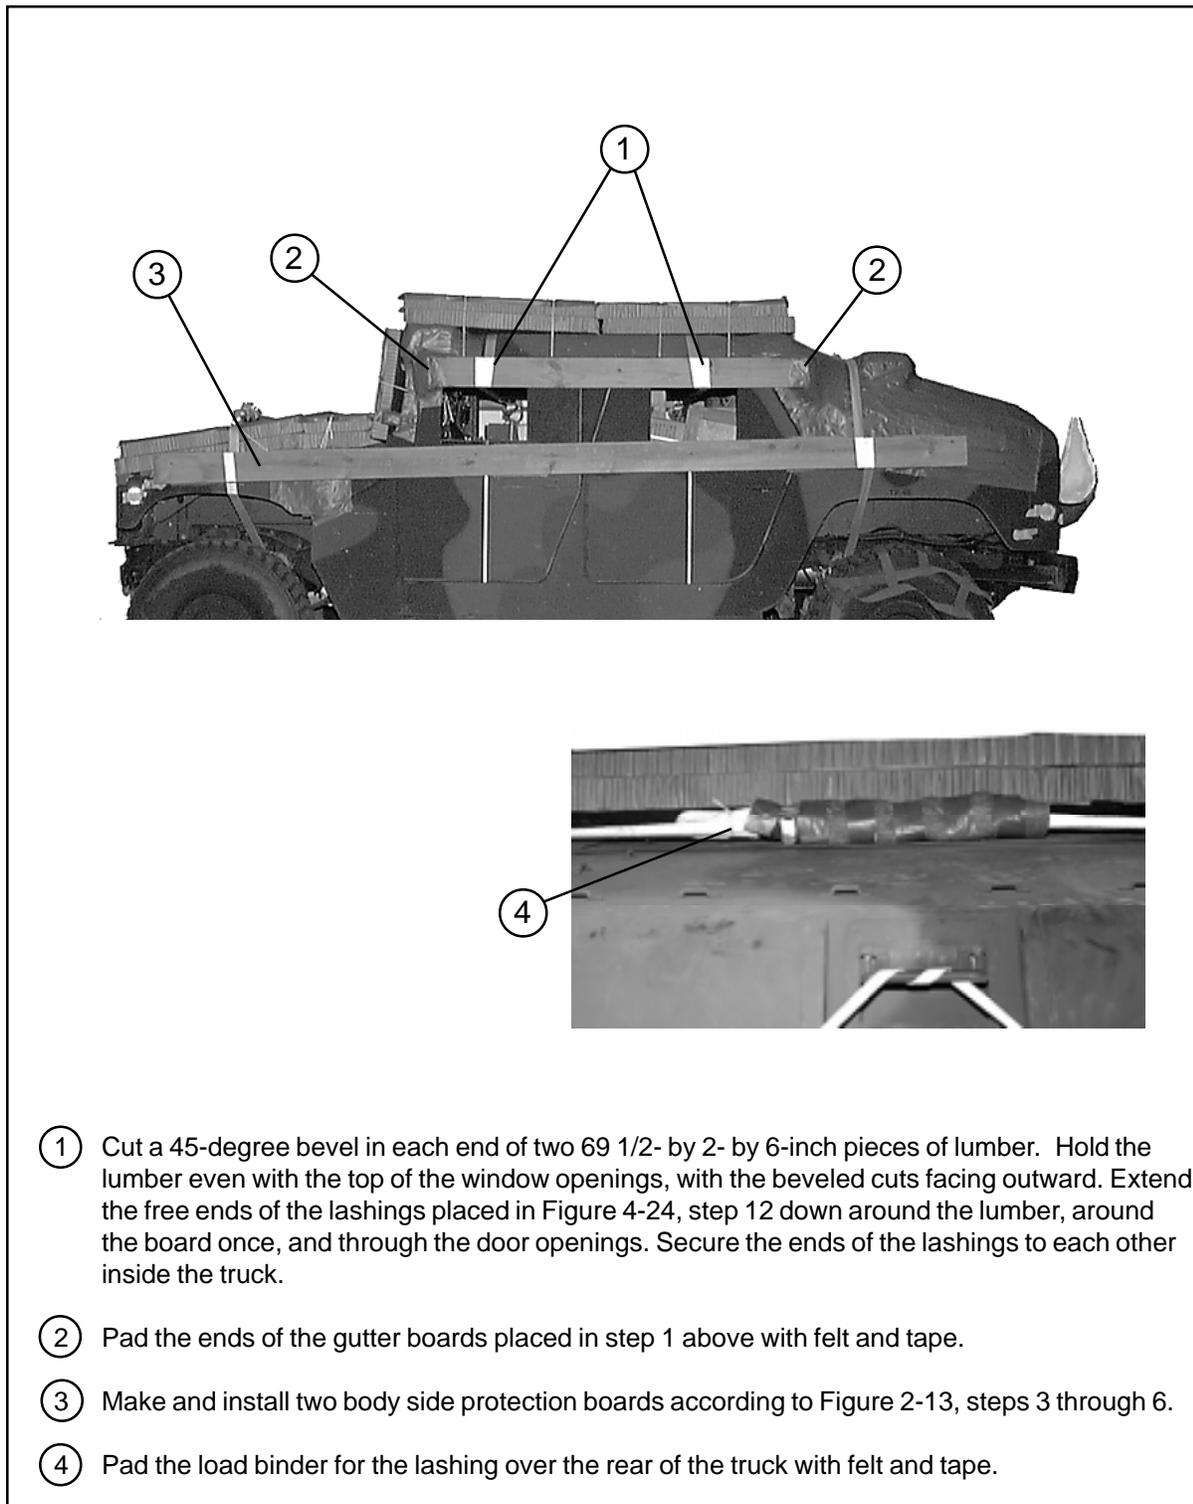


Figure 4-26. Body Side Protection Boards Installed